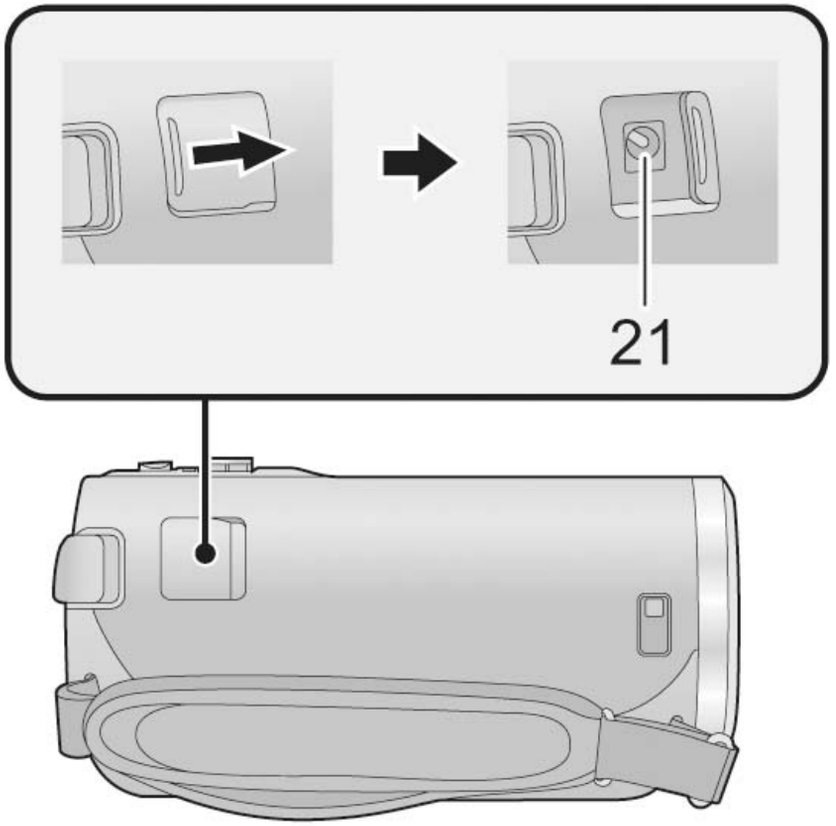

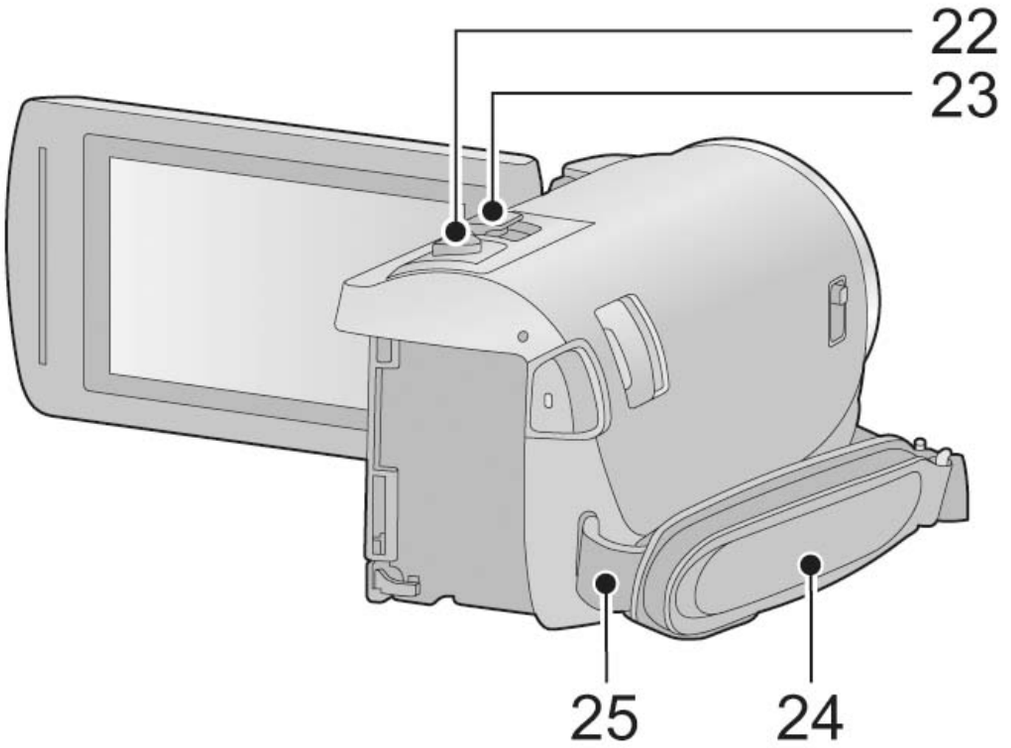

21 DC input terminal [DC IN] (➜ 11)

- Do not use any other AC adaptors except the supplied one.

22 Photoshot button [📷] (➜ 22)

23 Zoom lever [W/T] (In Motion Picture Recording Mode or Still Picture Recording Mode) (➜ 38)/ Thumbnail display switch [▦ / 🔍] (➜ 26)/ Volume lever [−VOL+] (In Playback Mode) (➜ 27)

24 Grip belt

Adjust the length of the grip belt so that it fits your hand.

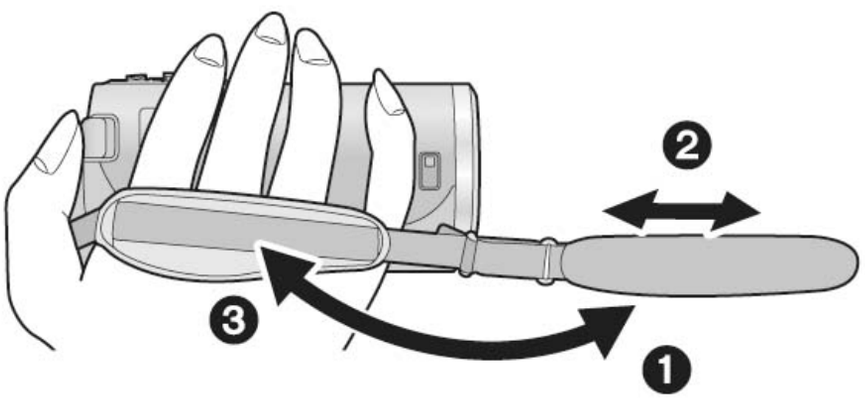

❶ Flip the belt.
❷ Adjust the length.
❸ Replace the belt.

25 Shoulder strap fixture